


## Model 2221F Piezoelectric accelerometer

#### **Features**

- NEW! 2221F-R available as replacement sensor
- High temperature operation (+260°C)
- Hermetically sealed
- 360° cable orientation
- Lightweight
- · Aerospace and flight testing



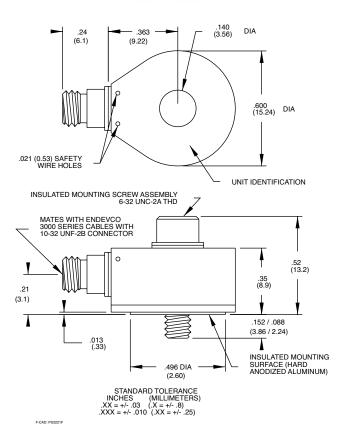

#### 北京汇润科贸有限公司

电话: +86 010 5601 8989 +86 010 5601 7979


传真: +86 010 5885 7266 邮箱: <u>sales@aq315.com</u> http://www.aq315.com


### Description

The Endevco® model 2221F piezoelectric accelerometer is designed specifically for high temperature vibration measurement on small structures and objects. The unit is hermetically sealed and is ideal for use in extreme environmental conditions. Its light weight (11 gm) effectively minimizes mass loading. The accelerometer is a self-generating device that requires no external power source for operation.

The model 2221F features Endevco's Piezite® type P-8 crystal element operating in annular shear mode. This unit exhibits excellent output sensitivity stability over time. Signal ground is connected to the outer case of the unit and, when used with an isolated mounting screw, the accelerometer is electrically isolated from ground. A lownoise coaxial cable is supplied for error-free operation. The transducer has a centrally located thru bolt, allowing for 360° cable orientation. The unit may also be adhesively mounted if the application permits.

Endevco signal conditioner models 133, 2771C, 2775B or OASIS 2000 computercontrolled system are recommended for use with this high impedance accelerometer.

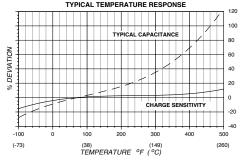

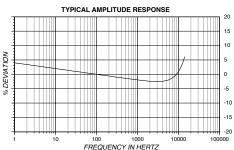



## Model 2221F Piezoelectric accelerometer

# Endevco

#### **Specifications**

The following performance specifications conform to ISA-RP-37.2 [1964] and are typical values, referenced at +75°F (+24°C), 4 mA and 100 Hz, unless otherwise noted. Calibration data, traceable to National Institute of Standards and Technology (NIST), is supplied

Dynamic characteristics	Units	
Charge sensitivity		
Typical	pC/g	10.0
Minimum	pC/g	7.5
Frequency response		See typical amplitude response
Resonance frequency	kHz	45
Amplitude response [1]		
±5%	Hz	1 to 10 000
±1 dB	Hz	.1 to 12 000
Temperature response		See typical curve
Transverse sensitivity	%	≤3
Amplitude linearity	%	1
Per 400g, 0 to 2000 g		
Electrical characteristics		
Output polarity		Acceleration directed into the base of the unit produces positive output
Resistance	GΩ	≥ 10
Resistance at +350°F (+177°C)	GΩ	≥1
Isolation	ΜΩ	10
Capacitance	pF	900
Grounding	•	Signal return is connected to case. Case is isolated from mounting
-		<u> </u>

#### **Environmental characteristics**

Temperature range		-67°F to +500°F (-55°C to +260°C)
Humidity		Hermetically sealed
	· ·	

#### Physical characteristics

Dimensions		See outline drawing
Weight	gm (oz)	11 (0.39)
Case material		Stainless steel

**Connector** Coaxial, 10-32 male thread

Mounting torque lbf-in (Nm) 8 (1

#### Calibration

 Supplied:

 Frequency response
 %
 20 Hz to 10 000 Hz

 dB
 10 kHz to 50 kHz

 Charge sensitivity
 pC/q

Maximum transverse sensitivity %
Capacitance pF

#### Accessories

Product	Description	2221F	2221F-R
3090DV-120	Cable assembly, 10 ft	Included	Optional
10207	Insulated mounting screw	Included	Included
EHM49	Allen wrench, 7/64 inch	Included	Optional
2987	Adhesive mounting adapter	Included	Optional
2771C	In-line charge convertor	Optional	Optional
133	Signal conditioner	Optional	Optional
2775B	Signal conditioner	Optional	Optional
4990A-1	OASIS 2000 computer-controlled system	Optional	Optional

#### Notes:

surface by insulated screw assembly.

- 1. Low-end response of the transducer is a function of its associated electronics.
- Short duration shock pulses, such as those generated by metal-to-metal impacts, may excite transducer resonance and cause linearity errors. Send for TP290 for more details.
- Maintain high levels of precision and accuracy using Endevco's factory calibration services. Call Endevco's inside sales force at 800-982-6732 for recommended intervals, pricing and turn-around time for these services as well as for quotations on our standard products.



